




### Using Save Setup in UltraScope

Date: 12.22.2011

*Solution:* Here is a brief overview of using the Save Setup feature of the DS1000 Series of oscilloscopes with the UltraScope software.


1. Configure the scope for the measurement of interest.
  - This can be done manually using the front panel or through UltraScope.
  - You can use the virtual front panel or adjust the settings in the DSO Controller and Download the new settings to the instrument.

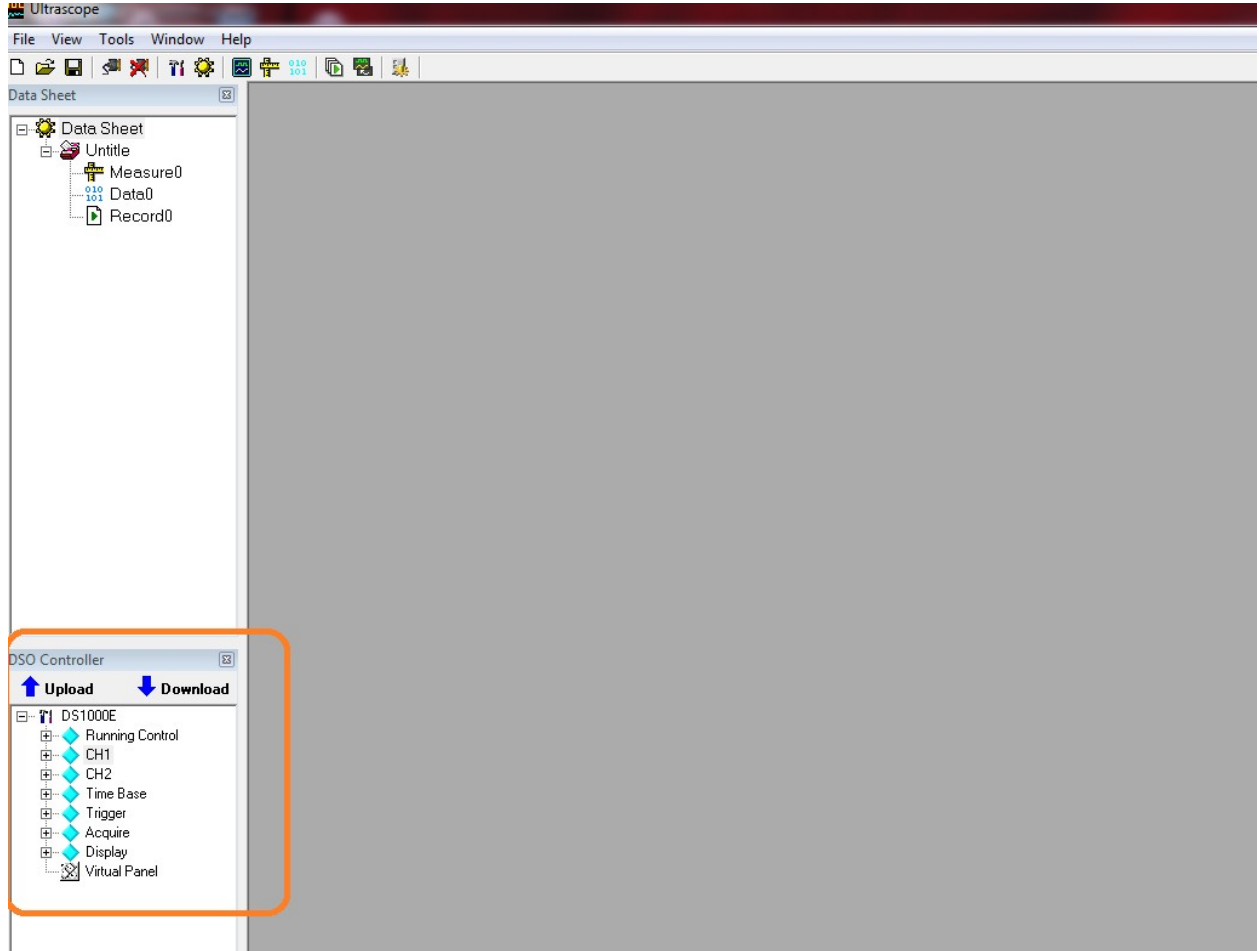


- 2. After you have the scope configured, you can save the setup.
  - To manually save the setup, press the Storage key on the front panel of the scope > select Storage from the Storage Menu > select Internal or External (for USB memory stick storage) > select a memory location or filename.



- To use Ultrascope for a save setup operation, open the Virtual Panel and select the Storage Button

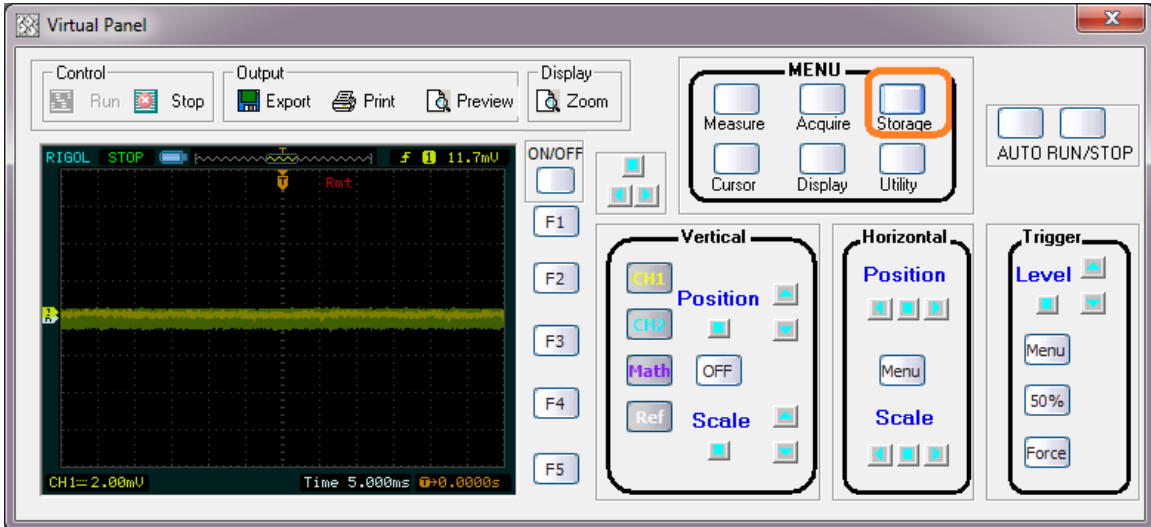


- Press F1 to cycle through the Storage Menu. Select Setups from the Storage Menu

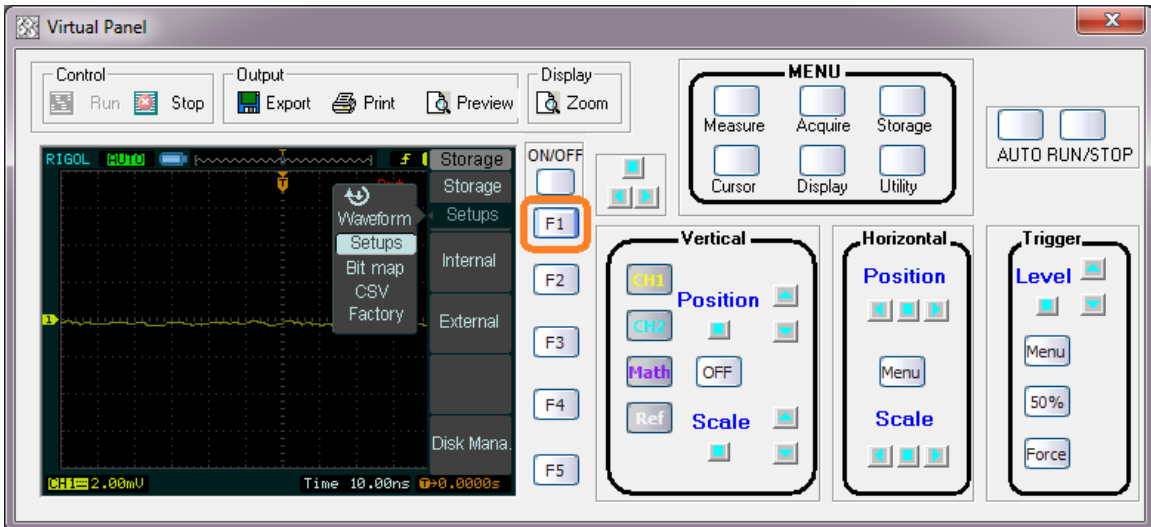



- Select F2 for Internal or F3 External (for USB memory stick storage)

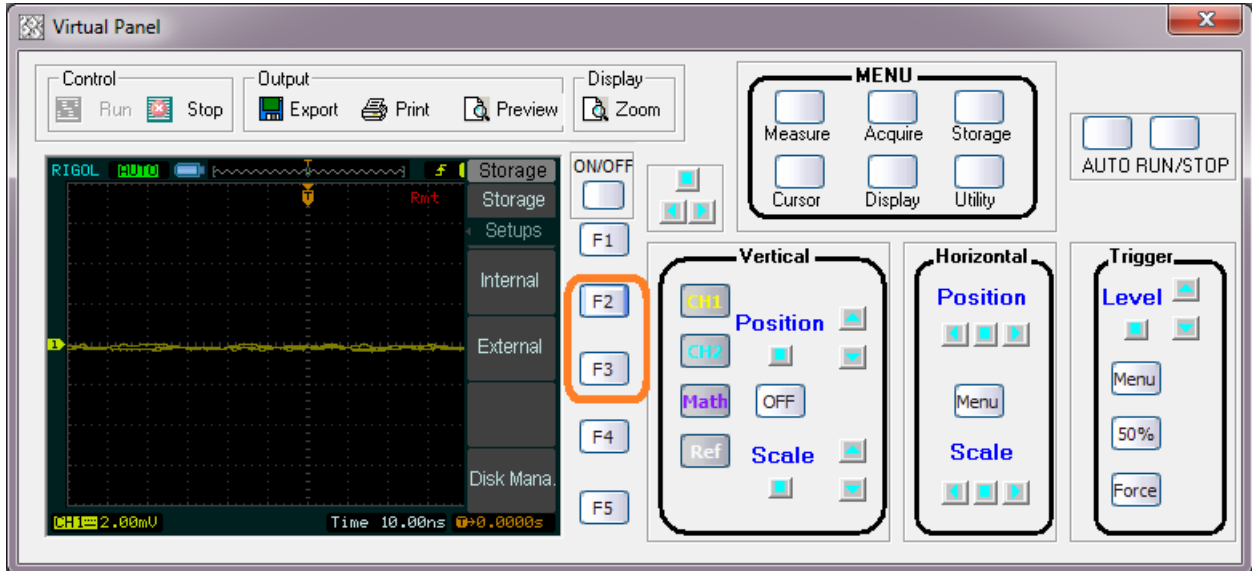

- Using F1, Select a memory location or filename. Press F3 to save a setup and F2 to load a previously stored setup.

