




RIGOL

Ultra Station

User Guide
UGU04101-1110
Mar. 2026



Guaranty and Declaration

Copyright

© 2026 RIGOL TECHNOLOGIES CO., LTD. All Rights Reserved.

Trademark Information

RIGOL® is the trademark of RIGOL TECHNOLOGIES CO., LTD.

Notices

- RIGOL products are covered by P.R.C. and foreign patents, issued and pending.
- RIGOL reserves the right to modify or change parts of or all the specifications and pricing policies at the company's sole decision.
- Information in this publication replaces all previously released materials.
- Information in this publication is subject to change without notice.
- RIGOL shall not be liable for either incidental or consequential losses in connection with the furnishing, use, or performance of this manual, as well as any information contained.
- Any part of this document is forbidden to be copied, photocopied, or rearranged without prior written approval of RIGOL.

Product Certification

RIGOL guarantees that this product conforms to the national and industrial standards in China as well as the ISO9001:2015 standard and the ISO14001:2015 standard. Other international standard conformance certifications are in progress.

Contact Us

If you have any problem or requirement when using our products or this manual, please contact RIGOL.

E-mail: service@rigol.com

Website: <http://www.rigol.com>

Section	Description	Page
	List of Figures.....	II
1	Product Overview	1
1.1	Installation Environment	1
1.2	Installation and Uninstallation	2
1.3	To Launch the Software	3
1.4	Software Interface	3
2	To Use the Software	7
2.1	File Management	7
2.2	To Create the Waveform	10
2.2.1	Sine	11
2.2.2	Square	12
2.2.3	Ramp	13
2.2.4	Noise	14
2.2.5	DC	15
2.2.6	RS232	16
2.2.7	Multi-Pulse	17
2.2.8	Multi-Tone	18
2.3	To Edit the Waveform	19
2.3.1	Cursor	19
2.3.2	Edit Mode	19
2.3.3	Wave Edit	20
2.3.3.1	To Insert the Sine Waveform	25
2.3.3.2	To Insert the Square Waveform	26
2.3.3.3	To Insert the Ramp Waveform	27
2.3.3.4	To Insert the Noise Waveform	28
2.3.3.5	To Insert the DC Signal Waveform	29
2.3.3.6	To Insert the RS232 Waveform	30
2.3.3.7	To Insert the Multi-Pulse Waveform	31
2.3.3.8	To Insert the Multi-Tone Waveform	32
2.3.4	Waveform Drawing Mode	33
2.4	Waveform Calculation	34
2.5	Waveform View	38
2.6	To Send the Waveform	40

List of Figures

Figure 1.1 Ultra Station Main Interface	3
Figure 1.2 Interface Setting	4
Figure 1.3 Software Version Information	4
Figure 2.1 File Menu Interface	7
Figure 2.2 Open a File	8
Figure 2.3 "Save As" Interface	9
Figure 2.4 Waveform Selection Interface	10
Figure 2.5 Waveform Creation Interface	10
Figure 2.6 Create the Sine Waveform	12
Figure 2.7 Create the Square Waveform	13
Figure 2.8 Create the Ramp Waveform	14
Figure 2.9 Create the Noise Waveform	15
Figure 2.10 Create the DC Waveform	15
Figure 2.11 Create the RS232 Waveform	16
Figure 2.12 Create the Multi-Pulse Waveform	17
Figure 2.13 Create the Multi-Tone Waveform	18
Figure 2.14 Waveform Editing Interface	20
Figure 2.15 "Insert Waveform" Interface	23
Figure 2.16 Insert the Sine Waveform	25
Figure 2.17 Insert the Square Waveform	26
Figure 2.18 Insert the Ramp Waveform	27
Figure 2.19 Insert the Noise Waveform	28
Figure 2.20 Insert the DC Signal Waveform	29
Figure 2.21 Insert the RS232 Waveform	30
Figure 2.22 Insert the Multi-Pulse Waveform	31
Figure 2.23 Insert the Multi-Tone Waveform	32
Figure 2.24 Formula Editor Interface	34

Figure 2.25 Trigonometric/Antitrigonometric/Hyperbolic Functions	35
Figure 2.26 Math Function	36
Figure 2.27 Multiplication Operation	37
Figure 2.28 Waveform View Setting Interface	39
Figure 2.29 "Send Waveform Data" Interface	40
Figure 2.30 Add LAN Instrument	41

1 Product Overview

Ultra Station software is a PC software for the function/arbitrary waveform generator. It is developed by RIGOL TECHNOLOGIES CO., LTD. (**RIGOL**) based on the RIGOL TAP platform. The software can be used to edit the arbitrary waveform. It supports the following products.

- DG1022Z, DG1032Z, DG1062Z
- DG2052, DG2072, DG2102
- DG4202, DG4162, DG4102, DG4062
- DG5071, DG5072, DG5101, DG5102, DG5251, DG5252, DG5351, DG5352
- DG5252 Pro, DG5254 Pro, DG5258 Pro, DG5352 Pro, DG5354 Pro, DG5358 Pro, DG5502 Pro, DG5504 Pro, DG5508 Pro
- DG6052, DG6054, DG6102, DG6104
- DG70002, DG70004
- DG811, DG821, DG831, DG812, DG822, DG832
- DG821 Pro, DG822 Pro, DG852 Pro
- DG952, DG972, DG992
- DG902 Pro, DG912 Pro, DG922 Pro
- MSO5072, MSO5074, MSO5102, MSO5104, MSO5204, MSO5354, MSO5152-E
- MSO7014, MSO7024, MSO7034, MSO7054
- MSO8064, MSO8104, MSO8204
- MSO8074A, MSO8154A, MSO8304A



NOTE

For the MSO series, only those installed with the signal source option are supported by the Ultra Station software.

1.1 Installation Environment

Hardware Configuration Requirements

- Internal Memory: 4 GB or higher (8 GB or higher is recommended.)
- Monitor: 1920x1080 screen resolution or higher.

- Intel® Core™ i3 and above processor
- Hard disk: 1 GB or higher

Running Environment

- Microsoft Windows 7 SP1+, Windows 8, Windows 10, and Windows 11
- NI-VISA 5.4 or above
- Microsoft .NET 6.0 64-bit/32-bit
 - 64-bit download link: <https://dotnet.microsoft.com/en-us/download/dotnet/thank-you/runtime-desktop-6.0.29-windows-x64-installer> .
 - 32-bit download link: <https://dotnet.microsoft.com/en-us/download/dotnet/thank-you/runtime-desktop-6.0.29-windows-x86-installer> .



NOTE

If you want to install or run Microsoft .NET 6.0 on Microsoft Windows 7 SP1, additional dependencies are required.

- Microsoft Visual C++ 2015-2019 Redistributable 64-bit/32-bit
 - 64-bit download link: https://aka.ms/vs/17/release/vc_redist.x64.exe .
 - 32-bit download link: https://aka.ms/vs/17/release/vc_redist.x86.exe .
- KB3063858 64-bit/32-bit
 - 64-bit download link: <https://www.microsoft.com/en-us/download/details.aspx?id=47442> .
 - 32-bit download link: <https://www.microsoft.com/en-us/download/details.aspx?id=47409> .

1.2 Installation and Uninstallation

Install Ultra Station

Double-click the "setup.exe" file of the Ultra Station software installation package to complete the installation according to the installation wizard.

Uninstall Ultra Station

Click **Start** > **Control Panel** > **Programs and Features** > **Ultra Station** > **Uninstall**. Then a prompt message is displayed, requesting you to confirm the operation. Click **Yes** to start uninstalling the software.

1.3 To Launch the Software

Click **Start** > **RIGOL** > **Ultra Station** to launch the software. You can also double-click the software shortcut icon to launch the software.

1.4 Software Interface

The layout of the Ultra Station interface is shown below.

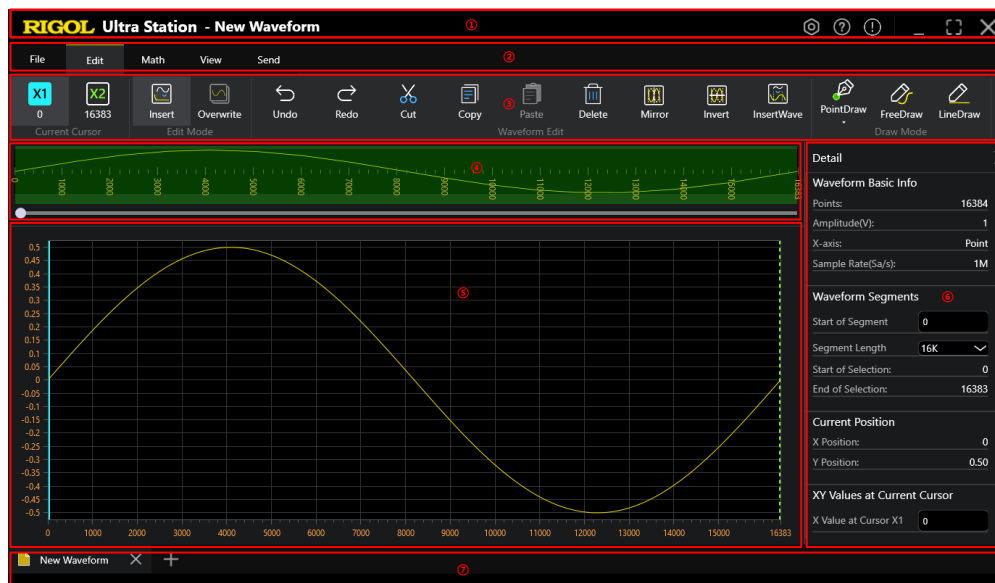



Figure 1.1 Ultra Station Main Interface

1. Title bar. It displays the RIGOL logo, interface name, settings, help, minimize window, maximize window, and close window button.

- **Settings:** Click on  to enter the setting interface. You can select the interface language (Chinese/English) and the background color of the interface (Black/White), as shown in the figure below.

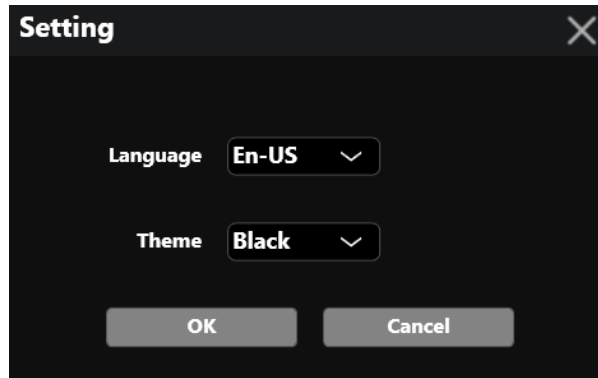





Figure 1.2 Interface Setting

- **About:** Click on  to display the software information.





Figure 1.3 Software Version Information

- **Minimize window:** Click on  to minimize the window.
- **Maximize window:** Click on  to maximize the window.
- **Close:** Click on  to close the window.

2. Menu display area. It displays the software menu, including File, Edit, Math, View, and Send.








3. Sub-menu display area. It displays the sub-menus of the specified main menu, such as Current Cursor, Edit Mode, Waveform Edit, and Draw Mode.

4. Waveform segment display area. It displays the current waveform segment and waveform coordinates information. Drag the scroll bar  or click on it to display the waveforms in segments.
5. Waveform segment zoom area. It displays the zoomed area of the specified waveform segment covered in green patch. Drag the green patch , and the specified waveform segment covered by the green patch is displayed in the waveform segment zoom area.
6. Waveform detailed information display area. It displays the detailed information of the waveform.

Waveform Basic Info

- **Points:** indicate the number of points for the current waveform.
- **Amplitude(V):** indicates the amplitude of the original existing waveform.
- **X-axis:** indicates the type of the X-axis. It can be Point or Time.
- **Sample Rate(Sa/s):** indicates the sample rate of the current waveform.

Waveform Segments

- **Start of Segment:** indicates the start X-axis value of the specified waveform segment. When dragging the scroll bar or clicking on the scroll bar  to select the specified waveform segment, the value of "Start of Segment" corresponds to the X-axis value of the specified waveform segment.
- **Segment Length:** indicates the number of points of each waveform segment.
- **Start of Selection:** indicates the start X-axis value of the specified waveform segment covered by the green patch . When dragging the green patch , dragging the scroll bar or clicking on the scroll bar , the value of "Start of Selection" changes and corresponds to the X-axis value of the start position of specified waveform segment covered by the green patch.
- **End of Selection:** indicates the end X-axis value of the specified waveform segment covered by the green patch . When dragging the green patch , dragging the scroll bar or clicking on the scroll bar , the value of "End of Selection" changes and corresponds to the X-axis value of the end position of specified waveform segment covered by the green patch.

Current Mouse Position

- **X Position:** displays the X-axis position of the current mouse cursor.
- **Y Position:** displays the Y-axis position of the current mouse cursor.



XY Values at Current Cursor: displays the X values and Y values at Cursor X1




and Cursor X2




respectively. Input a specified value into the input field


of **X Value at Cursor X1** and **X Value at Cursor X2**,  and  will be moved to the specified position.

- **X Value at Cursor X1:** displays the X-axis value of the crossing point between


the waveform and Cursor X1 . You can also input a value into the input field of **X Value at Cursor X1** to locate Cursor X1 to a specified position.

- **Y Value at Cursor X1:** displays the Y-axis value of the crossing point between

the waveform and Cursor X1 . You can also input a value into the input field of **Y Value at Cursor X1**, and a new waveform point will be added to the original waveform. Its Y-axis value is the Y value you set and X-axis value is


where the Cursor X1  resides.


- **X Value at Cursor X2:** displays the X-axis value of the crossing point between

the waveform and Cursor X2 . You can also input a value into the input

field of **X Value at Cursor X2** to locate Cursor X2  to a specified position.

- **Y Value at Cursor X2:** displays the Y-axis value of the crossing point between

the waveform and Cursor X2 . You can also input a value into the input field of **Y Value at Cursor X2**, and a new waveform point will be added to the original waveform. Its Y-axis value is the Y value you set and X-axis value is

where the Cursor X2  resides.

Click on  to fold the detailed information display area. To show the details, click

on  or  to unfold the area.

7. Waveform files opened. It displays the currently opened waveform files. You can click on the close icon of each file to close the existing file.

2 To Use the Software

This manual introduces the Ultra Station software from the following parts: File Management, To Create the Waveform, To Edit the Waveform, Waveform Calculation, Waveform View, and To Send the Waveforms.

2.1 File Management

File management includes creating, opening, saving, or saving as a waveform file. You can open the waveform files by clicking **Recently** to open the recent files or by clicking **Browse** to select the file from the specified path and open it. You can also close the file and exit the software.

Create a File

1. In *Figure 1.1*, click **File**. The sub-menus of **File** are displayed at the left part of the interface.

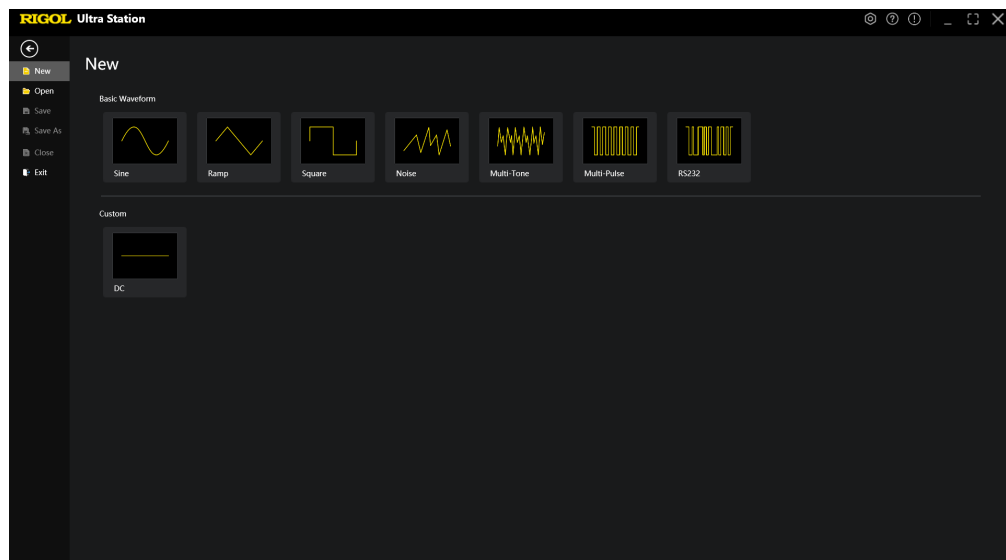


Figure 2.1 File Menu Interface

2. Click **New**, and then select a basic waveform from the built-in waveforms or click "DC" to create a user-defined waveform (DC by default).
3. After selecting the specified waveform, you can set the waveform parameters such as frequency, amplitude, and etc.
4. After confirming the settings, click **OK**, and the new waveform file is created.

NOTE

For details about creating a file of different types of waveforms, refer to *To Create the Waveform*.



Open a File

1. In *Figure 2.1*, click **Open** to select the desired file from "Recently" or "Browse" menu.

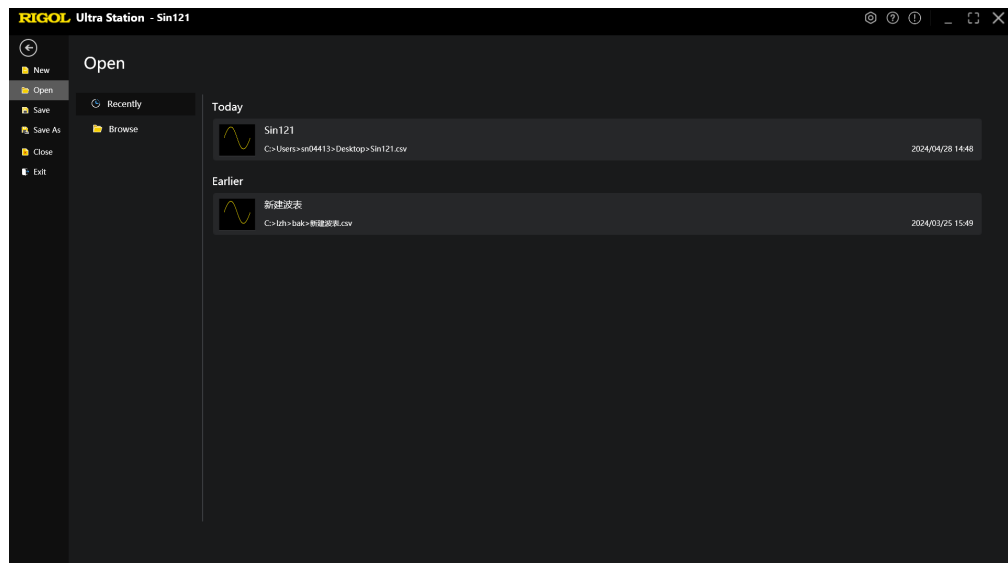


Figure 2.2 Open a File

2. Click **Recently**, and the recently saved waveform files are displayed at the right section. Click to open the desired file.
3. Click **Browse**, and the default path is displayed. You can select the saved waveform file from the specified path and open it.

NOTE

Ultra Station only supports opening waveform files saved with the "Ultra Station" save option in the "Save As" menu. Besides, it also supports opening the saved waveform file suffixed with "*.csv", and "*.bin" which are saved on some oscilloscopes (DHO series, MSO series, and DS70000 series).

Save a File

1. After finishing editing the waveform, in *Figure 1.1*, click **File > Save**.
2. Then the path location is displayed for you to choose. Select the desired path and input the filename (if necessary), then click **Save** to save the file to the desired path.

NOTE

Ultra Station supports saving the waveform as a file suffixed with "*.csv", "*.txt", "*.raf", and "*.arb".

Save As

1. If you want to save the currently edited waveform file as a file with a specified format or save it to the specified path, or save it as the file type that can be read, click **Save As** in *Figure 2.1* to save the current waveform as a file suffixed with a specified format to a specified location.

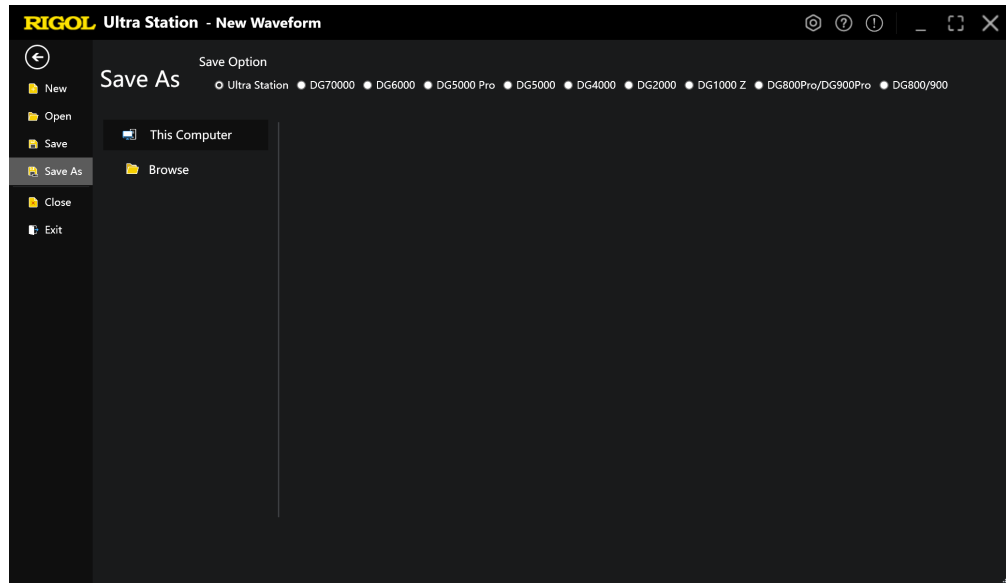


Figure 2.3 "Save As" Interface

2. You can save the file to the current path or history path. You can also click **Browse** to select the desired path to save the file.
3. Besides, you can use the "Save Option" items to export the file and then import it into the following products to load and output:
 - DG1022Z, DG1032Z, DG1062Z
 - DG2052, DG2072, DG2102
 - DG4202, DG4162, DG4102, DG4062
 - DG5071, DG5072, DG5101, DG5102, DG5251, DG5252, DG5351, DG5352
 - DG5252 Pro, DG5254 Pro, DG5258 Pro, DG5352 Pro, DG5354 Pro, DG5358 Pro, DG5502 Pro, DG5504 Pro, DG5508 Pro
 - DG6052, DG6054, DG6102, DG6104
 - DG70002, DG70004
 - DG811, DG821, DG831, DG812, DG822, DG832
 - DG821 Pro, DG822 Pro, DG852 Pro
 - DG952, DG972, DG992
 - DG902 Pro, DG912 Pro, DG922 Pro

Close

Click **Close** to close the file management interface and go back to the main interface of the Ultra Station software.

Exit

Click **Exit** to exit the Ultra Station software.

2.2 To Create the Waveform

1. In *Figure 1.1*, click **File** > **New**. The available waveforms are displayed at the right part of the menu.

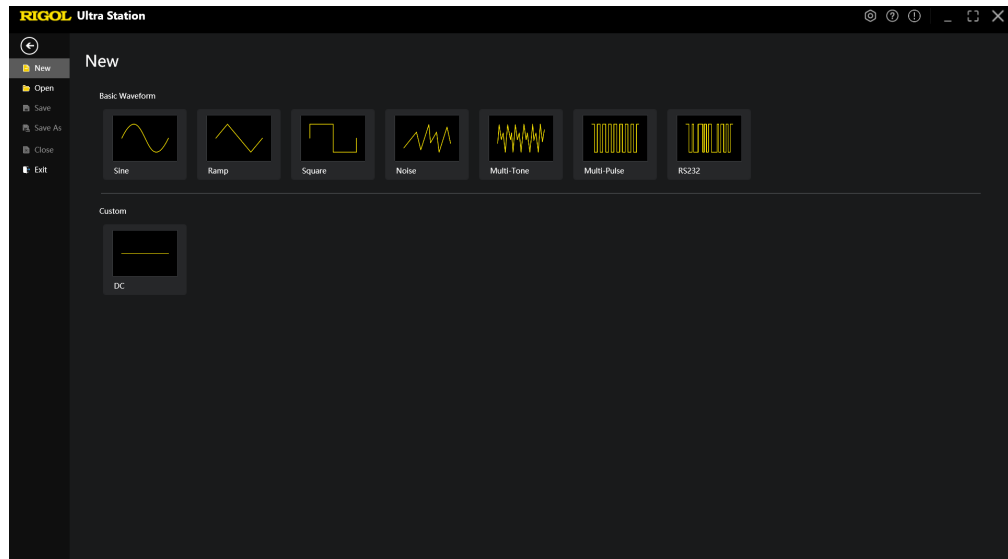


Figure 2.4 Waveform Selection Interface

2. Select the desired waveform from the available built-in basic waveforms or create a user-defined waveform file (DC). Then the waveform creation interface is displayed. You can set the waveform parameters and preview the created waveform.

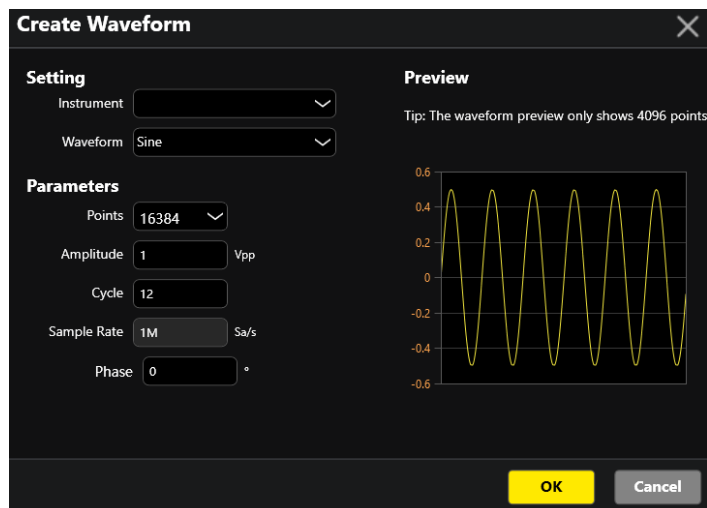


Figure 2.5 Waveform Creation Interface

3. Select the desired instrument and the waveform type.
 - a. **Instrument:** selects the desired instrument.

b. Waveform: selects the desired waveform to be created from the drop-down list. After selecting the desired waveform to be created, set its relevant parameters.

For the parameter settings of the specified created waveform, refer to detailed descriptions of the following waveform type.

- *Sine*
- *Square*
- *Ramp*
- *Noise*
- *DC*
- *RS232*
- *Multi-Pulse*
- *Multi-Tone*

4. After completing the parameters for the new waveforms, you can preview the created waveform in the Preview section at the right part of the interface and modify the relevant parameters in the Parameter section at the left part if necessary.

5. After confirming the settings, click **OK**, and the new waveform is created.

2.2.1 Sine

In the "Create Waveform" interface, click the drop-down button of **Waveform** to select **Sine**. The Sine waveform is displayed in the preview section. You can set the parameters of Sine waveform at the left section of the current interface.

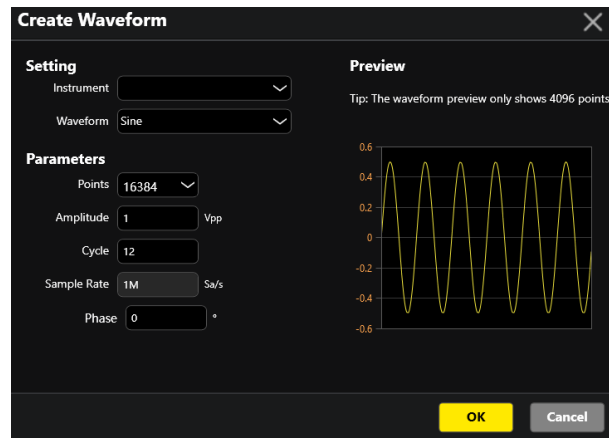


Figure 2.6 Create the Sine Waveform

Points: sets the number of waveform points for the Sine waveform. It's an integer, ranging from 8 to max. value (determined by the selected instrument model). You can click the drop-down button of **Points** to select the desired points or directly input the points for the Sine waveform of the specified instrument.

Amplitude: sets the amplitude of the created Sine waveform. Its range is from 0.02 Vpp to max. value (determined by the selected instrument model), accurate to two decimal places.

Cycle: sets the number of cycles for the new Sine waveform. It's an integer, ranging from 1 to (Points/8).

Sample Rate: sets the sample rate of the new Sine waveform. Its range is from 1,000 to max. value (determined by the selected instrument model).

Phase: sets the phase of the new Sine waveform. Its range is from 0° to 359.99° , accurate to two decimal places.

2.2.2 Square

In the "Create Waveform" interface, click the drop-down button of **Waveform** to select **Square**. The Square waveform is displayed in the preview section. You can set the parameters of Square waveform at the left section of the current interface.

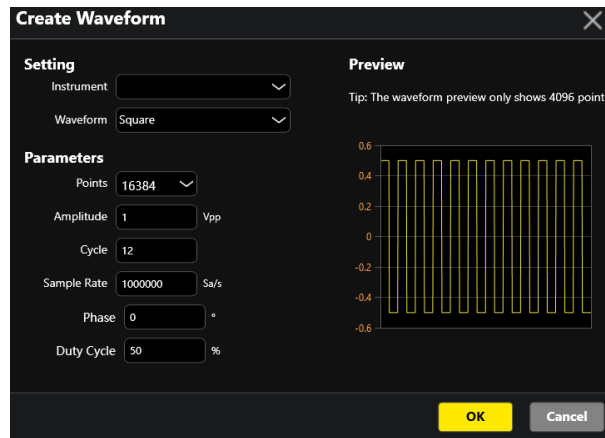


Figure 2.7 Create the Square Waveform

Points: sets the number of waveform points for the Square waveform. It's an integer, ranging from 8 to max. value (determined by the selected instrument model). You can click the drop-down button of **Points** to select the desired points or directly input the points for the Square waveform of the specified instrument.

Amplitude: sets the amplitude for the created Square waveform. Its range is from 0.02 Vpp to max. value (determined by the selected instrument model), accurate to two decimal places.

Cycle: sets the number of cycles for the new Square waveform. It's an integer, ranging from 1 to (Points/8).

Sample Rate: sets the sample rate of the new Square waveform. Its range is from 1,000 to max. value (determined by the selected instrument model).

Phase: sets the phase of the new Square waveform. Its range is from 0° to 359.99°, accurate to two decimal places.

Duty Cycle: sets the duty cycle of the new Square waveform. It is defined as the percentage that high level takes up in the whole period. Its range is from 20% to 80%. By default, it is 50%.

2.2.3 Ramp

In the "Create Waveform" interface, click the drop-down button of **Waveform** to select **Ramp**. The Ramp waveform is displayed in the preview section. You can set the parameters of Ramp waveform at the left section of the current interface.

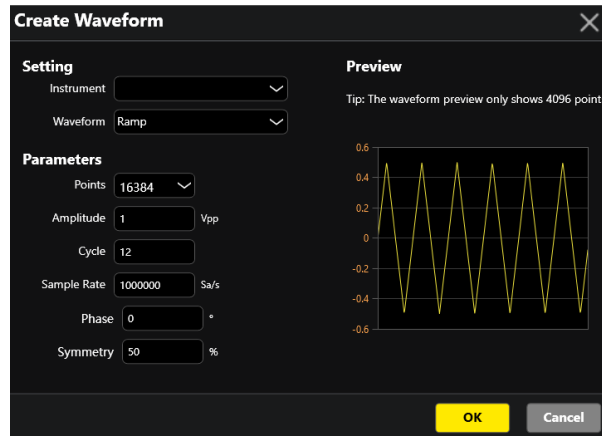


Figure 2.8 Create the Ramp Waveform

Points: sets the number of waveform points for the Ramp waveform. It's an integer, ranging from 8 to max. value (determined by the selected instrument model). You can click the drop-down button of **Points** to select the desired points or directly input the points for the Ramp waveform of the specified instrument.

Amplitude: sets the amplitude of the created Ramp waveform. Its range is from 0.02 Vpp to max. value (determined by the selected instrument model), accurate to two decimal places.

Cycle: sets the number of cycles for the new Ramp waveform. It's an integer, ranging from 1 to (Points/8).

Sample Rate: sets the sample rate of the new Ramp waveform. Its range is from 1,000 to max. value (determined by the selected instrument model).

Phase: sets the phase of the new Ramp waveform. Its range is from 0° to 359.99°, accurate to two decimal places.

Symmetry: sets the symmetry of the Ramp waveform. It is defined as the percentage that the rising period of the ramp takes up in the whole period. Its range is from 0% to 100%.

2.2.4 Noise

In the "Create Waveform" interface, click the drop-down button of **Waveform** to select **Noise**. The Noise waveform is displayed in the preview section. You can set the parameters of the Noise waveform at the left section of the current interface.

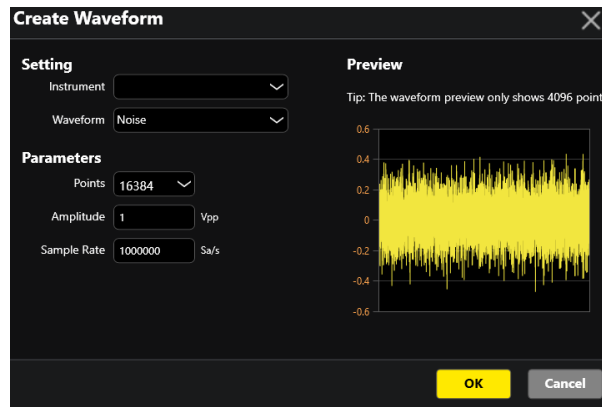


Figure 2.9 Create the Noise Waveform

Points: sets the number of waveform points for the Noise waveform. It's an integer, ranging from 8 to max. value (determined by the selected instrument model). You can click the drop-down button of **Points** to select the desired points or directly input the points for the Noise waveform of the specified instrument.

Amplitude: sets the amplitude of the created Noise waveform. Its range is from 0.02 Vpp to max. value (determined by the selected instrument model), accurate to two decimal places.

Sample Rate: sets the sample rate of the Noise waveform. Its range is from 1,000 to max. value (determined by the selected instrument model).

2.2.5 DC

In the "Create Waveform" interface, click the drop-down button of **Waveform** to select **DC**. The DC waveform is displayed in the preview section. You can set the parameters of DC waveform at the left section of the current interface.

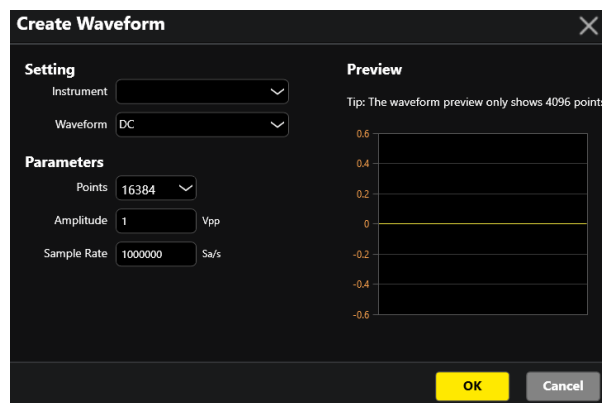


Figure 2.10 Create the DC Waveform

Points: sets the number of waveform points for the DC waveform. It's an integer, ranging from 8 to max. value (determined by the selected instrument model). You can

click the drop-down button of **Points** to select the desired points or directly input the points for the DC waveform of the specified instrument.

Amplitude: sets the amplitude of the created DC waveform file. Its range is from 0.02 Vpp to max. value (determined by the selected instrument model), accurate to two decimal places.

Sample Rate: sets the sample rate of the DC waveform. Its range is from 1,000 to max. value (determined by the selected instrument model).

2.2.6 RS232

In the "Create Waveform" interface, click the drop-down button of **Waveform** to select **RS232**. The RS232 waveform is displayed in the preview section. You can set the parameters of RS232 waveform at the left section of the current interface.

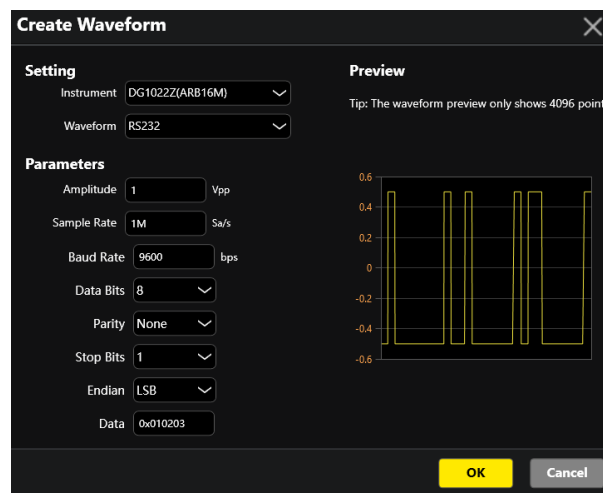


Figure 2.11 Create the RS232 Waveform

Amplitude: sets the amplitude of the created RS232 waveform. Its range is from 0.02 Vpp to max. value (determined by the selected instrument model), accurate to two decimal places.

Sample Rate: sets the sample rate of the created RS232 waveform. Its range is from 1,000 to max. value (determined by the selected instrument model).

Baud Rate: sets the baud rate of data transmission. It's an integer, ranging from 500 to (sample rate/2).

Data Bits: sets the number of data bits transmitted in RS232. It can be set to 5, 6, 7, or 8.

Parity: set the parity of RS232 waveform to "Odd", "Even", or "None".

Stop Bits: sets the stop bits of RS232 waveform. It can be set to 1, 1.5, or 2.

Endian: sets the transmission sequence of RS232 waveform. It can be set to "LSB" and "MSB". LSB (Least Significant Bit) indicates that the lowest bit of data is transmitted

first; MSB (Most Significant Bit) indicates that the highest bit of data is transmitted first.

Data: sets the data of the RS232 waveform. It is in Hex format, with "0x" being added ahead of the Hex format.

2.2.7 Multi-Pulse

In the "Create Waveform" interface, click the drop-down button of **Waveform** to select **Multi-Pulse**. The Multi-Pulse waveform is displayed in the preview section. You can set the parameters of Multi-Pulse waveforms at the left section of the current interface.

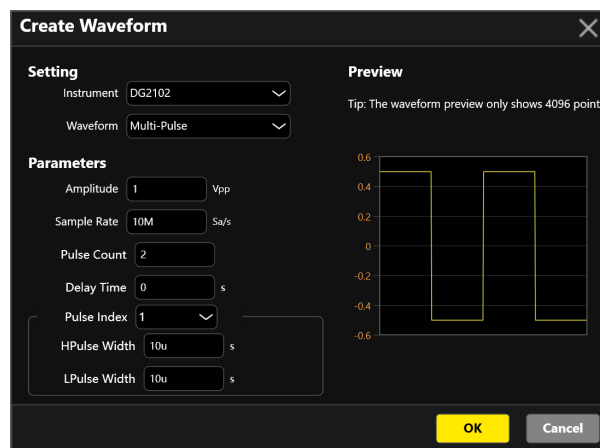


Figure 2.12 Create the Multi-Pulse Waveform

Amplitude: sets the amplitude of the new waveform. Its range is from 0.02 to max. amplitude (determined by the selected instrument model), accurate to two decimal places.

Sample Rate: sets the sample rate of the new multi-pulse waveform. Its range is from 1,000 to max. sample rate (determined by the selected instrument model).

Pulse Count: indicates the number of the pulses contained for the new multi-pulse waveforms. It's an integer, ranging from 2 to 30.

Delay Time: indicates the time interval between the pulses. It ranges from 0 to 1 s, accurate to 9 decimal places.

Pulse Index: specifies the pulse number. You can select the specified pulse for the parameter setting.

HPulse Width: indicates the high-level pulse width. When a specified pulse number is selected, set it for the specified pulse. The min. value is $1/\text{sample rate}$ (expressed in s). The sum of the HPulse width and LPulse width of all the pulses shall not be greater than $(\text{max. waveform points}/\text{sample rate})$ (expressed in s), accurate to 9 decimal places. The max. number of the waveform points is determined by the currently selected instrument model.

LPulse Width: indicates the low-level pulse width. When a specified pulse number is selected, set it for the specified pulse. The min. value is 1/sample rate (expressed in s). The sum of the HPulse width and LPulse width of all the pulses shall not be greater than (max. waveform points/sample rate (expressed in s)), accurate to 9 decimal places. The max. number of the waveform points is determined by the currently selected instrument model.

2.2.8 Multi-Tone

In the "Create Waveform" interface, click the drop-down button of **Waveform** to select **Multi-Tone**. The multi-tone waveform is displayed in the preview section. You can set the parameters of multi-tone waveform at the left section of the current interface.

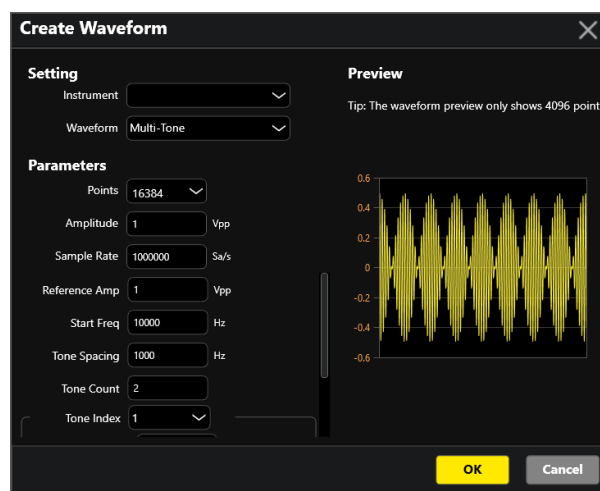


Figure 2.13 Create the Multi-Tone Waveform

Points: sets the number of waveform points of the new multi-tone waveform. It is an integer, ranging from 8 to max. points (determined by the selected instrument model). You can click the drop-down button of **Points** to select the desired points or directly input the points for the multi-tone waveform of the specified instrument.

Amplitude: sets the amplitude of the new multi-tone waveform. Its range is from 0.02 to max. amplitude (determined by the selected instrument model), accurate to two decimal places.

Sample Rate: sets the sample rate of the new multi-tone waveform. Its range is from 1,000 to max. sample rate (determined by the selected instrument model).

Reference Amp: indicates the amplitude of each sine waveform (with 0 dB gain) of the multi-tone waveform.

Start Freq: indicates the start frequency of the new multi-tone waveform. Its range is from 400 to sample rate/2.5, accurate to 6 decimal places.

Tone Spacing: indicates the spacing between the adjacent frequencies of the new multi-tone signal. Its range is from 1,000 to 50 M.

Tone Count: indicates the number of the tones. It's an integer, ranging from 1 to 30.

Tone Index: specifies the tone number. You can select the specified tone for the parameter setting.

Gain: specifies the magnification times for the selected tone. Its range is from 0 to -20 dB.

Phase: indicates the start phase (start point of the waveform) of the selected tone. The default unit is degree (°). Its range is from 0° to 359.99°, accurate to two decimal places.



Status: sets the status of the selected tone. 0 indicates that the selected tone is invalid; 1 indicates that the selected tone is valid.

2.3 To Edit the Waveform

Ultra Station allows you to cut, copy, paste, delete, mirror, invert, insert, and overwrite waveforms. It supports point, free, and line drawing of waveforms.


2.3.1 Cursor


Cursor Position

Click on  to activate Cursor 1 (X1, in blue); click on  to activate Cursor 2 (X2, in green). When the cursor is selected, the selected cursor turns out to be a solid line whereas the not selected one becomes a dotted line. Select the cursor and drag it to any position.

The waveforms specified by Cursor 1 (X1) and Cursor 2 (X2) are the currently selected waveforms.

2.3.2 Edit Mode

Ultra Station provides two waveform editing modes: Insert  and Overwrite

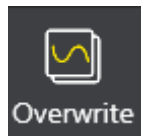

Insert: Inserts the preset or copied waveform at the earlier cursor position, and shifts the original waveform to the right by the length of the preset or copied waveform.

Overwrite: Inserts the preset or copied waveform at the earlier cursor position, and overwrites the original waveform according to the length of the preset or copied waveform.

2.3.3 Wave Edit

Click **Edit**, and the sub-menus are displayed. Refer to *File Management* to open the waveforms to be edited.

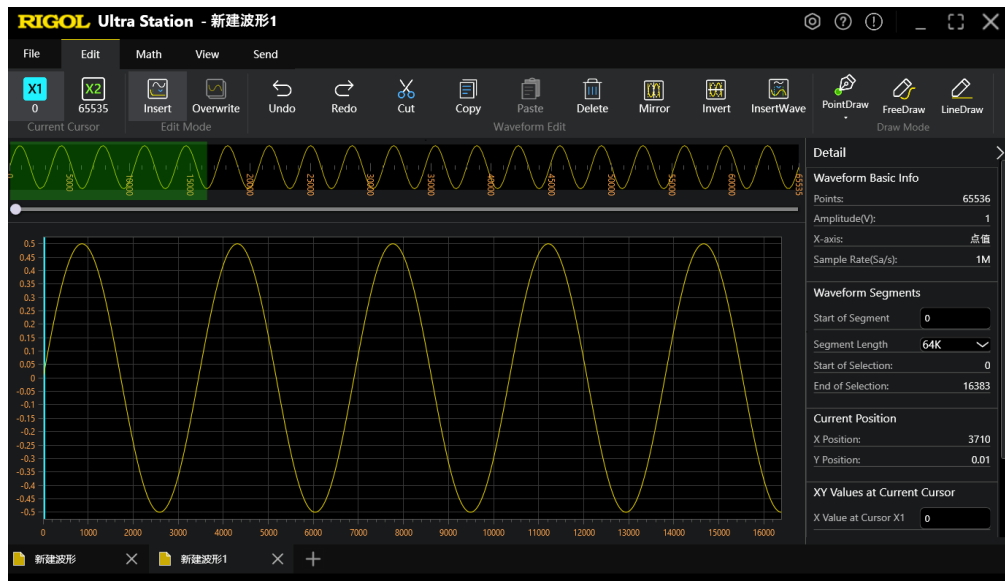










Figure 2.14 Waveform Editing Interface


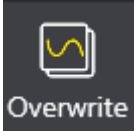






Copy and Paste the Waveform

- Click on  to enter the waveform insertion mode. Click on  to enter the waveform overwriting mode.
- Move the current cursor  and  to specify the waveform segment to be copied.
- Click on  to copy the specified segment of the waveform.
- Move the cursor  or  to specify the desired position where you want to paste the waveform. Click on  to paste the copied specified waveform to this



position. The copied waveform will be pasted to the location specified by X1 and X2 in Insert edit mode. The original waveform in the range specified by X1 and X2 will be moved towards right. In Overwrite edit mode, the copied waveform will be pasted to overwrite the original waveform located between X1 and X2.


5. After completing the operation, click **File** > **Save** (or **Save As**) to save the current operation and save it to a desired location as a file.


Cut and Paste the Waveform

1. Click on  to enter the waveform insertion mode. Click on  to enter the waveform overwriting mode.
2. Move the current cursor  and  to specify the range of the selected waveform to be cut.
3. Click on  to cut the selected waveform segment.
4. Move the current cursor  and  to the desired position where you want to paste the waveform. Click on  to paste the specified waveform to this position. The cut waveform will be pasted to the location specified by X1 and X2 in Insert edit mode. The original waveform in the range specified by X1 and X2 will be moved towards right. In Overwrite edit mode, the cut waveform will be pasted to overwrite the original waveform located between X1 and X2.
5. After completing the operation, click **File** > **Save** (or **Save As**) to save the current operation and save it to a desired location as a file.



Delete the Waveform

1. Move the current cursor  and  to specify the range of the waveform to be deleted.




2. Click on  to delete the specified segment of the waveform. When deleted in "Insert" mode, the right side becomes a blank waveform. When deleted in "Overwrite" mode, the deleted segment becomes a blank waveform.
3. After completing the operation, click **File** > **Save** (or **Save As**) to save the current operation and save it to a desired location as a file.



Mirror the Waveform

1. Move the current cursor  and  to specify the range of the selected waveform to be mirrored.




2. Click on  to mirror the specified segment of the waveform. The selected waveform will make a symmetry along the center of the vertical axis.
3. After completing the operation, click **File** > **Save** (or **Save As**) to save the current operation and save it to a desired location as a file.

Invert the Waveform

1. Move the current cursor  and  to specify the range of the selected waveform to be inverted.



2. Click on  to invert the specified segment of the waveform. The selected waveform will be inverted along the center of the horizontal axis.

3. After completing the operation, click **File** > **Save** (or **Save As**) to save the current operation and save it to a desired location as a file.

Insert the Waveform



1. In *Figure 2.14*, select "Insert" mode and then click **InsertWave** to insert the desired waveform into the range specified by X1 and X2.

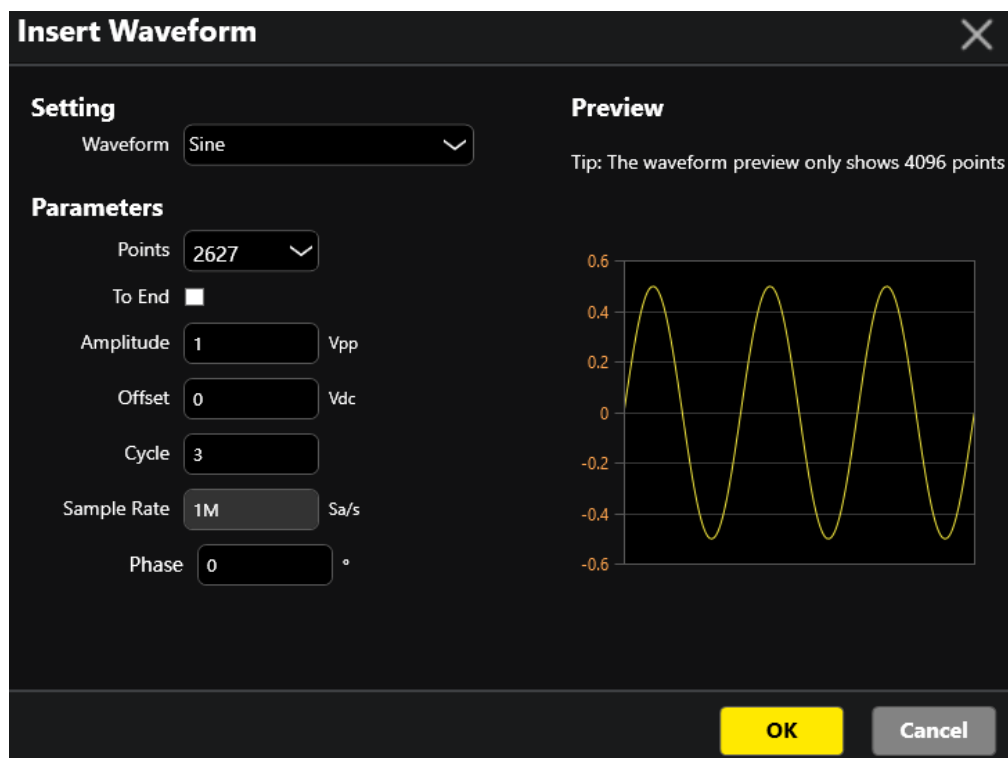


Figure 2.15 "Insert Waveform" Interface

2. **Waveform:** selects the desired waveform to be inserted from the drop-down list of **Waveform**.
3. **Parameters:** sets the parameters of the inserted waveform. The available waveforms to be inserted include the following. Click on the specified topic below to learn more about parameter settings for the specified waveform type.
 - *To Insert the Sine Waveform*
 - *To Insert the Square Waveform*
 - *To Insert the Ramp Waveform*

- *To Insert the Noise Waveform*
- *To Insert the DC Signal Waveform*
- *To Insert the RS232 Waveform*
- *To Insert the Multi-Pulse Waveform*
- *To Insert the Multi-Tone Waveform*

4. **Preview:** displays the preview of waveforms to be inserted.

5. After completing the settings, click **OK** and the system will insert this waveform at the smaller cursor position, while the original waveform at that position will be moved towards right in sequence.

6. After completing the operation, click **File > Save** (or **Save As**) to save the current operation and save it to a desired location as a file.

Overwrite the Waveform



1. In *Figure 2.14*, select "Overwrite" mode and then click **InsertWave** to insert the desired waveform into the range specified by X1 and X2 to overwrite the original waveform, as shown in *Figure 2.15*.

2. **Waveform:** selects the desired waveform to overwrite the original waveform from the drop-down list of **Waveform**.

3. **Parameters:** sets the parameters of the inserted waveform.

For detailed parameter settings, refer to relevant descriptions in "**Insert the Waveform**" section above.

4. **Preview:** displays the preview of waveforms to be inserted to overwrite the original waveform.

5. After completing the settings, click **OK**, then the system will use this waveform to overwrite the waveform of the same length starting from the smaller cursor position.

6. After completing the operation, click **File > Save** (or **Save As**) to save the current operation and save it to a desired location.

Undo Operation



Click on **Undo** to undo the last operations. At most, last five operations can be undone.

Redo Operation



Click on **Redo** to redo the last undo operations. At most, last five undo operations can be recovered.

2.3.3.1 To Insert the Sine Waveform

In the "Insert Waveform" interface, click the drop-down button of **Waveform** to select **Sine**. The Sine waveform is displayed in the preview section. You can set the parameters of Sine waveform at the left section of the current interface.

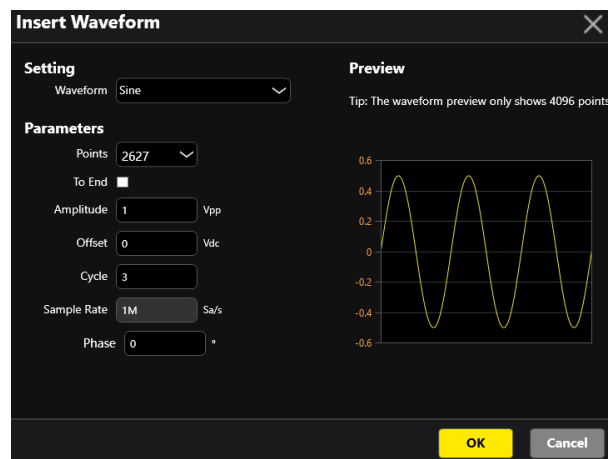


Figure 2.16 Insert the Sine Waveform

Points: sets the number of waveform points for the inserted Sine waveform. The range is from 1 to the max. number of the original existing waveform points. You can click the drop-down button of **Points** to select the desired points or directly input the points for the inserted Sine waveform of the specified instrument.

To End: When you check the checkbox of "To End", the input field of **Points** is automatically filled with the number of waveform points from the smaller cursor position to the waveform end.

Amplitude: sets the amplitude of the inserted Sine waveform. Its range is from 0.02 Vpp to the amplitude of the original existing waveform, no more than two decimal places.

Offset: sets the DC offset for the inserted Sine waveform. Its range is related to the amplitude setting of the inserted waveform and the amplitude of the original

existing waveform. Its value ranges from $-(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$ to $+(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$, no more than two decimal places.

Cycle: sets the number of cycles for the inserted Sine waveform. It's an integer, ranging from 1 to $(\text{Points}/8)$.

Sample Rate: same as the sample rate of the original existing waveform and cannot be modified.

Phase: sets the phase of the inserted Sine waveform. Its range is from 0° to 359.99° , accurate to two decimal places.

2.3.3.2 To Insert the Square Waveform

In the "Insert Waveform" interface, click the drop-down button of **Waveform** to select **Square**. The Square waveform to be inserted is displayed in the preview section. You can set the parameters of Square waveform at the left section of the current interface.

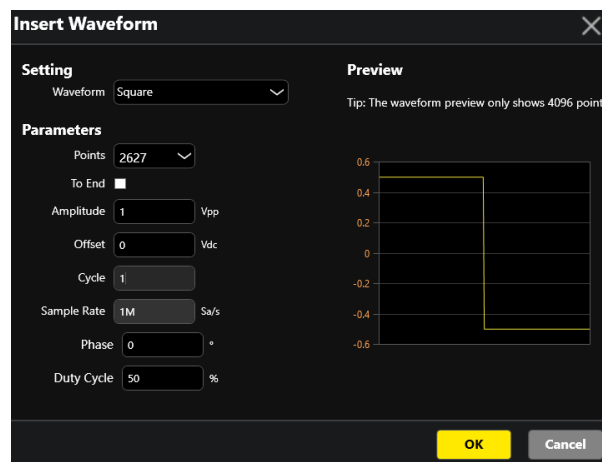


Figure 2.17 Insert the Square Waveform

Points: sets the number of waveform points for the inserted Square waveform. The range is from 1 to the max. number of the original existing waveform points. You can click the drop-down button of **Points** to select the desired points or directly input the points for the inserted Square waveform of the specified instrument.

To End: When you check the checkbox of "To End", the input field of **Points** is automatically filled with the number of waveform points from the smaller cursor position to the waveform end.

Amplitude: sets the amplitude of the inserted Square waveform. Its range is from 0.02 Vpp to the amplitude of the original existing waveform, no more than two decimal places.

Offset: sets the DC offset for the inserted Square waveform. Its range is related to the amplitude setting of the inserted waveform and the amplitude of the original existing waveform. Its value ranges from $-(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$ to $+(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$, no more than two decimal places.

Cycle: sets the number of cycles for the inserted Square waveform. It's an integer, ranging from 1 to $(\text{Points}/8)$.

Sample Rate: same as the sample rate of the original existing waveform and cannot be modified.

Phase: sets the phase of the inserted Square waveform. Its range is from 0° to 359.99° , accurate to two decimal places.

Duty Cycle: sets the duty cycle of the inserted Square waveform. It is defined as the percentage that high level takes up in the whole period. Its range is from 20% to 80%. By default, it is 50%.

2.3.3.3 To Insert the Ramp Waveform

In the "Insert Waveform" interface, click the drop-down button of **Waveform** to select **Ramp**. The Ramp waveform is displayed in the preview section. You can set the parameters of Ramp waveform at the left section of the current interface.

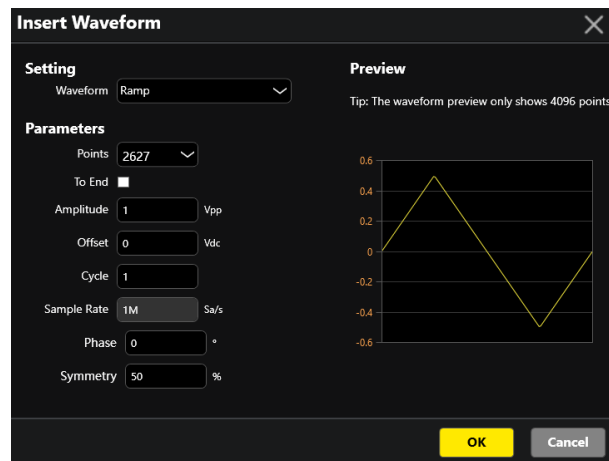


Figure 2.18 Insert the Ramp Waveform

Points: sets the number of waveform points for the inserted Ramp waveform. The range is from 1 to the max. number of the original existing waveform points. You can click the drop-down button of **Points** to select the desired points or directly input the points for the inserted Ramp waveform of the specified instrument.

To End: When you check the checkbox of "To End", the input field of **Points** is automatically filled with the number of waveform points from the smaller cursor position to the waveform end.

Amplitude: sets the amplitude of the inserted Ramp waveform. Its range is from 0.02 Vpp to the amplitude of the original existing waveform.

Offset: sets the DC offset for the inserted Ramp waveform. Its range is related to the amplitude setting of the inserted waveform and the amplitude of the original existing waveform. Its value ranges from $-(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$ to $+(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$.

Cycle: sets the number of cycles for the inserted Ramp waveform. It's an integer, ranging from 1 to $(\text{Points}/8)$.

Sample Rate: same as the sample rate of the original existing waveform and cannot be modified.

Phase: sets the phase of the inserted Ramp waveform. Its range is from 0° to 359.99° , accurate to two decimal places.

Symmetry: sets the symmetry of the inserted Ramp waveform. It is defined as the percentage that the rising period of the ramp takes up in the whole period. Its range is from 0% to 100%.

2.3.3.4 To Insert the Noise Waveform

In the "Insert Waveform" interface, click the drop-down button of **Waveform** to select **Noise**. The Noise waveform is displayed in the preview section. You can set the parameters of the Noise waveform at the left section of the current interface.



Figure 2.19 Insert the Noise Waveform

Points: sets the number of waveform points for the inserted Noise waveform. The range is from 1 to the max. number of the original existing waveform points. You can click the drop-down button of **Points** to select the desired points or directly input the points for the inserted Noise waveform of the specified instrument.

To End: When you check the checkbox of "To End", the input field of **Points** is automatically filled with the number of waveform points from the smaller cursor position to the waveform end.

Amplitude: sets the amplitude of the inserted Noise waveform. Its range is from 0.02 Vpp to the amplitude of the original existing waveform.

Offset: sets the DC offset for the inserted Noise waveform. Its range is related to the amplitude setting of the inserted waveform and the amplitude of the original existing waveform. Its value ranges from $-(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$ to $+(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$.

Sample Rate: same as the sample rate of the original existing waveform and cannot be modified.

2.3.3.5 To Insert the DC Signal Waveform

In the "Insert Waveform" interface, click the drop-down button of **Waveform** to select **DC**. The DC signal waveform is displayed in the preview section. You can set the parameters of DC signal waveform at the left section of the current interface.

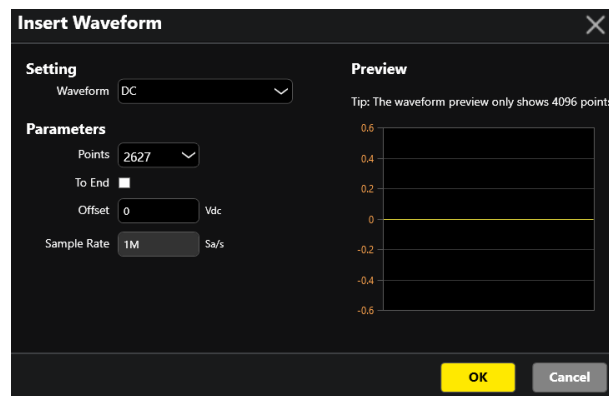


Figure 2.20 Insert the DC Signal Waveform

Points: sets the number of waveform points for the inserted DC waveform. The range is from 1 to the max. number of the original existing waveform points. You can click the drop-down button of **Points** to select the desired points or directly input the points for the inserted DC waveform of the specified instrument.

To End: When you check the checkbox of "To End", the input field of **Points** is automatically filled with the number of points from the smaller cursor position to the waveform end.

Offset: sets the DC offset for the inserted DC signal waveform. Its range is related to the amplitude setting of the inserted waveform and the amplitude of the original existing waveform. Its value ranges from $-(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$ to $+(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$.

Sample Rate: same as the sample rate of the original existing waveform and cannot be modified.

2.3.3.6 To Insert the RS232 Waveform

In the "Insert Waveform" interface, click the drop-down button of **Waveform** to select **RS232**. The RS232 waveform is displayed in the preview section. You can set the parameters of RS232 waveform at the left section of the current interface.

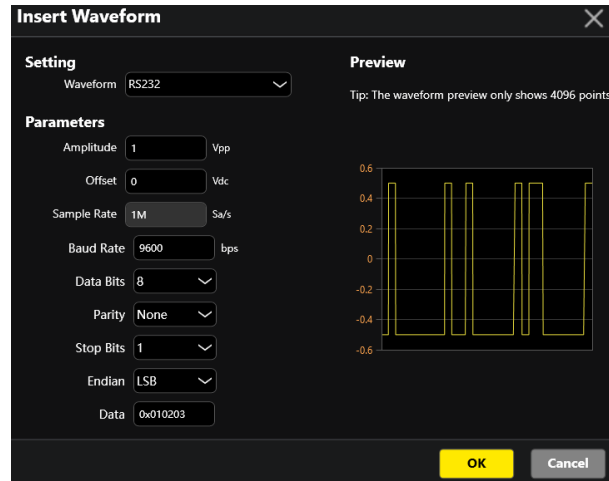


Figure 2.21 Insert the RS232 Waveform

Amplitude: sets the amplitude of the inserted RS232 waveform. Its range is from 0.02 Vpp to the amplitude of the original existing waveform.

Offset: sets the DC offset for the inserted RS232 waveform. Its range is related to the amplitude setting of the inserted waveform and the amplitude of the original existing waveform. Its value ranges from $-(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$ to $+(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$.

Sample Rate: same as the sample rate of the original existing waveform and cannot be modified.

Baud Rate: sets the baud rate of data transmission.

Data Bits: sets the number of data bits transmitted in RS232. It can be set to 5, 6, 7, or 8.

Parity: sets the parity of RS232 waveform to "Odd", "Even", or "None".

Stop Bits: sets the stop bits of RS232 waveform. It can be set to 1, 1.5, or 2.

Endian: sets the transmission sequence of RS232 waveform. It can be set to "LSB" and "MSB". LSB (Least Significant Bit) indicates that the lowest bit of data is transmitted first; MSB (Most Significant Bit) indicates that the highest bit of data is transmitted first.

Data: sets the data of RS232 waveform.

2.3.3.7 To Insert the Multi-Pulse Waveform

In the "Insert Waveform" interface, click the drop-down button of **Waveform** to select **Multi-Pulse**. The Multi-Pulse waveform is displayed in the preview section. You can set the parameters of Multi-Pulse waveforms at the left section of the current interface.

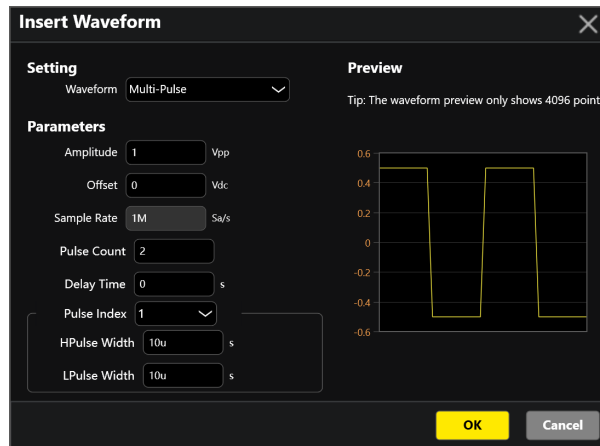


Figure 2.22 Insert the Multi-Pulse Waveform

Amplitude: sets the amplitude of the multi-pulse waveform. Its range is from 0.02 Vpp to the amplitude of the current existing waveform.

Offset: sets the offset for the inserted multi-pulse waveform. Its range is related to the amplitude setting of the inserted waveform and the amplitude of the original existing waveform. Its value ranges from $-(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$ to $+(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$.

Sample Rate: same as the sample rate of the original waveform and cannot be modified.

Pulse Count: indicates the number of the pulses. It's an integer, ranging from 2 to 30.

Delay Time: indicates the time interval between the pulses. It ranges from 0 to 1 s, accurate to 9 decimal places.

Pulse Index: specifies the pulse number. You can select the specified pulse for the parameter setting.

HPulse Width: indicates the high-level pulse width. When a specified pulse number is selected, set it for the specified pulse. The min. value is $1/\text{sample rate}$ (expressed in s). The sum of the HPulse width and LPulse width of all the pulses shall not be greater than $(\text{max. waveform points}/\text{sample rate})$ (expressed in s), accurate to 9 decimal places.

LPulse Width: indicates the low-level pulse width. When a specified pulse number is selected, set it for the specified pulse. The min. value is $1/\text{sample rate}$ (expressed in

s). The sum of the HPulse width and LPulse width of all the pulses shall not be greater than (max. waveform points/sample rate (expressed in s)), accurate to 9 decimal places.

2.3.3.8 To Insert the Multi-Tone Waveform

In the "Insert Waveform" interface, click the drop-down button of **Waveform** to select **Multi-Tone**. The multi-tone waveform is displayed in the preview section. You can set the parameters of multi-tone waveform at the left section of the current interface.

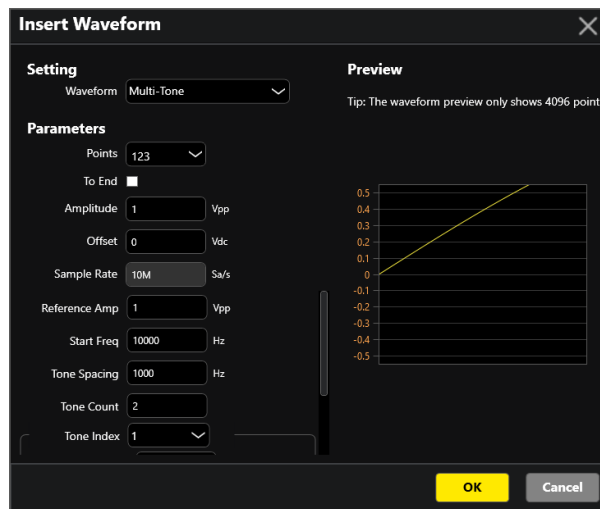


Figure 2.23 Insert the Multi-Tone Waveform

Points: sets the number of waveform points for the inserted multi-tone waveform. The range is from 1 to the max. number of the original existing waveform points. You can click the drop-down button of **Points** to select the desired points or directly input the points for the inserted multi-tone waveform of the specified instrument.

To End: When you check the checkbox of "To End", the input field of **Points** is automatically filled with the number of waveform points from the smaller cursor position to the waveform end.

Amplitude: sets the amplitude of the inserted multi-tone waveform. Its range is from 0.02 Vpp to the amplitude set for the current existing waveform.

Offset: sets the offset for the inserted multi-tone waveform. Its range is related to the amplitude setting of the inserted waveform and the amplitude of the original existing waveform. Its value ranges from $-(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$ to $+(\text{amplitude of the original existing waveform} - \text{currently set amplitude of the inserted waveform})/2$.

Sample Rate: same as the sample rate of the original waveform and cannot be modified.

Reference Amp: indicates the amplitude of each sine waveform (with 0 dB gain) of the inserted multi-tone waveform.

Start Freq: Indicates the start frequency of the inserted multi-tone waveform. Its range is from 400 to sample rate/2.

Tone Spacing: Indicates the spacing between the adjacent frequencies of the inserted multi-tone signal. Its range is from 1,000 to 50M.

Tone Count: indicates the number of the tones. It's an integer, ranging from 1 to 30.

Tone Index: specifies the tone number. You can select the specified tone for the parameter setting.


Gain: specifies the magnification times for the selected tone. Its range is from 0 to -20 dB.


Phase: indicates the start phase (start point of the waveform) of the selected tone. The default unit is degree (°). Its range is from 0° to 359.99°, accurate to two decimal places.

Status: sets the status of the selected tone. 0 indicates that the selected tone is invalid; 1 indicates that the selected tone is valid.


2.3.4 Waveform Drawing Mode


Point Drawing

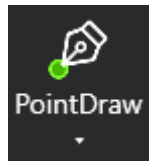

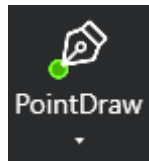1. In *Figure 2.14*, click on  to start point drawing.
2. In the waveform editing area, click any place to leave points one by one, and the points will be connected together with the existing waveform to form the new waveform shape.


All the added points can be seen as green dots in the waveform editing area.



3. Click on  to clear all the green dots that you have drawn.

Free Drawing



1. In *Figure 2.14*, click on  to start free drawing.
2. Click any place of the waveform editing area and long press the left key of the mouse to drag the existing waveform to perform waveform drawing. Drag to any

place to make a free drawing. The new drawn segment will be linked with the existing waveform.

Line Drawing



1. In *Figure 2.14*, click on **LineDraw** to start line drawing.
2. Click any place of the waveform editing area to set the starting point of the line. Then click again to set the end point. A straight line will be drawn between the starting point and the end point. Move the mouse and click again to set the end point of the next segment. You can continue moving and clicking the mouse to draw multiple connected line segments.

2.4 Waveform Calculation

In *Figure 1.1*, click **Math**, and the sub-menus of the math setting are displayed under the **Math** menu. Click **FormulaEdit**, and then the Formula Editor interface is displayed.

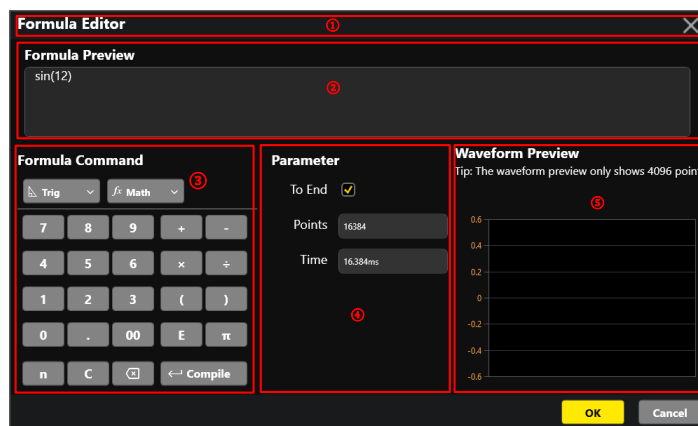


Figure 2.24 Formula Editor Interface

- ①: displays the interface name and the close button.
- ②: previews the formula you are editing or have edited.
- ③: displays the formula command. You can select the desired formula and input the number, operator, and function required for the formula. If you click "00",

two zeros will be input. "n" represents the index of waveform points, ranging from 0 to the specified end point. "E" indicates scientific notation.



Figure 2.25 Trigonometric/Antitrigonometric/Hyperbolic Functions

- **sin:** Sine function.
- **cos:** Cosine function.
- **tan:** Tangent function. It is abbreviated as tan or tg.
- **csc:** Cosecant function. It is abbreviated as csc or cosec.
- **sec:** Secant function.
- **cot:** Cotangent function. It is abbreviated as cot or ctg.
- **asin:** Arc sine function.
- **acos:** Arc cosine function.
- **atan:** Arc tangent function.
- **sinh:** Hyperbolic sine function.
- **cosh:** Hyperbolic cosine function.
- **tanh:** Hyperbolic tangent function.



Figure 2.26 Math Function

- **^**: Power function. For example, n^3 indicates the 3rd power of n .
 - **sqrt**: Square root.
 - **exp**: Base-e exponential function.
 - **log**: Base-10 logarithm function.
 - **log2**: Base-2 logarithm function.
 - **ln**: Base-e logarithm function.
 - **int**: integer truncation function. $\text{int}(x)$ means directly discarding the fractional part of x .
 - **ceil**: Rounds up to the nearest integer. The formula $\text{ceil}(x)$ generates the smallest integral value that is greater than or equal to the specified decimal number.
 - **floor**: Rounds down to the nearest integer. The formula $\text{floor}(x)$ generates the largest integral value that is equal to or smaller than the specified decimal number.
 - **abs**: Absolute value.
 - **sign**: Sign function. The formula $\text{sign}(x)$ returns a number that indicates the sign of x . When $x > 0$, $\text{sign}(x) = 1$; when $x < 0$, $\text{sign}(x) = -1$; when $x = 0$, $\text{sign}(x) = 0$.
- ④: parameter setting area. You can set the waveform points.

- **Points:** sets the number of waveform points specified between X1 and X2 for the waveform operation. The range is from 0 to the number of waveform points specified between X1 and X2.
- **To End:** When you check the checkbox of "To End", the input field of **Points** is automatically filled with the max. number of waveform points specified between X1 and X2.
- **Time:** displays the X-axis value of the waveforms when the X-axis of the waveform is set to Time. It changes along with the value of **Points** automatically and cannot be set manually.
- ⑤: waveform preview area. In the formula command area, after setting the formula, click **Compile** to compile the formula. Then set the parameter. After that, you can preview the waveforms in the waveform preview area.

Click **OK** to confirm the settings.

Multiply/Add/Subtract

In *Figure 1.1*, click **Math**, and the sub-menus of the math operation are displayed under the **Math** menu. Click on the specified math operator icon to enter the corresponding math operation interface.

The following section takes multiplication operation interface as an example to illustrate the function of each part.

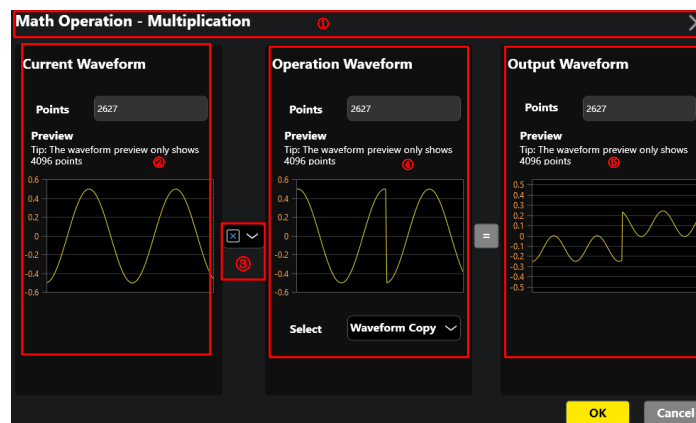


Figure 2.27 Multiplication Operation

- ①: displays the interface name and the close button.
- ②: displays the current waveform setting and waveform preview.

- ③: displays the current operation type. Click the drop-down button of the operation type to select the desired type.
- ④: displays the operation waveform setting and waveform preview. You can select the desired waveform from the drop-down list of **Select** as the operation waveform.
 - DC: A DC waveform with 0 offset.
 - Standard Waveform: You can define a waveform via the pop-up "Create Waveform" menu.
 - Waveform Copy: The clipboard stores waveforms previously saved through Copy or Cut operations. If no copy or cut operation has been performed yet, the default is a DC waveform with 0 offset.
- ⑤: displays the output waveform setting and preview of the waveforms that have undergone the specified math operation.

After setting, click **OK** to confirm the calculation.

Similarly, waveform addition and subtraction operations can be performed.

2.5 Waveform View


In *Figure 1.1*, click **View**, and the sub-menus of the view setting are displayed under the **View** menu.




Figure 2.28 Waveform View Setting Interface



Click on **Link Dot** to select whether to show or hide the waveform line. Click on




to show the line; click on **Hide Link** to hide the line.




Click on **X-axis Type** to set the type of the X-axis. When **Point** is selected, X-axis represents the number of points. When **Time** is selected, X-axis represents time.






Click on **Grids** to select whether to show or hide the grids. When **Show** is selected, the grids are shown in the background. When **Hide** is selected, the grids are hidden.



Click on **ZoomArea** and hold on to the left key of the mouse to drag the mouse



cursor to select the specified waveform area to be enlarged. Click on **ZoomFit** to restore the selected waveform to its original size.

Click on  to zoom in the waveforms. Click on  to zoom out. Click on  to restore it to its original size. You can also roll the mouse wheel to zoom in or out the selected waveform.

2.6 To Send the Waveform

In *Figure 1.1*, click **Send**, and the sub-menu of the **Send** menu is displayed. Click



, and the "Send Waveform Data" interface is displayed.

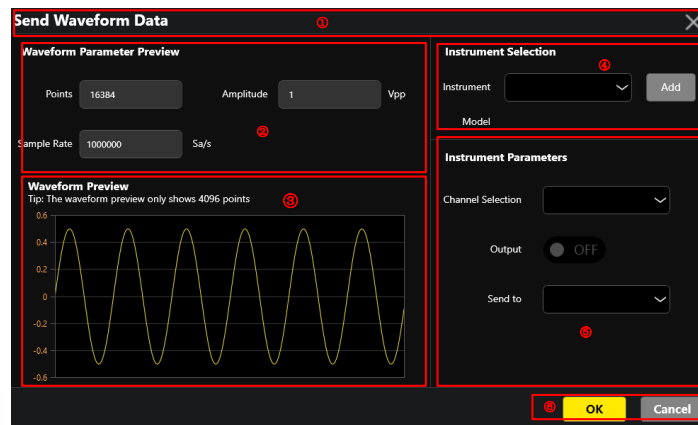


Figure 2.29 "Send Waveform Data" Interface

- ①: displays the interface name and the close button.
- ②: displays the current waveform parameter settings.
- ③: displays the waveform preview.
- ④: instrument selection area.

Click **Add** to enter the Add Instrument interface. You can add the LAN instrument.

Add Instrument

Add LAN Instrument

IP Address

TCPIP ID

VXI Remote Name

HiSLIP Remote Name

Socket Port

Figure 2.30 Add LAN Instrument


- **IP Address:** inputs the IP address of the instrument manually to which the waveform data are sent.
- **TCPIP ID:** selects the TCPIP ID.
- **Communication Protocol:** selects one of the three communication protocols: VXI, HiSLIP, and Socket. When you select "VXI" or "HiSLIP", you need to set **Remote Name**. When you select "Socket", you need to set the port number.
- After setting, click **Test Connection** to check whether the instrument is successfully connected. If yes, click **OK**, then the instrument is added to the LAN instrument resource list. If no, please check whether the IP address of the instrument that you input is correct.
- ⑤: instrument parameter area. It displays the selected channel, enables or disables the output, the location where the waveform data are sent to.
- ⑥: operation confirmation area. After completing the settings, click **OK** to confirm the setting operation. Click **Cancel** to cancel the setting operation.

Boost Smart World and Technology Innovation


Industrial Intelligent
Manufacturing



Semiconductors

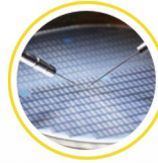


Education &
Research

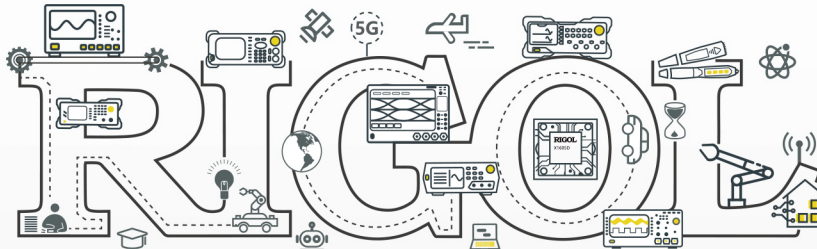

Communication

System Integration

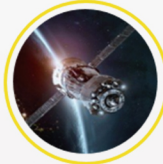

New Energy



- 5G Cellular-5G/WIFI
- UWB/RFID/ ZIGBEE
- Digital Bus/Ethernet
- Optical Communication

- Digital/Analog/RF Chip
- Memory and MCU Chip
- Third-Generation Semiconductor
- Solar Photovoltaic Cells

- New Energy Automobile
- PV/Inverter
- Power Test
- Automotive Electronics

Provide Testing and Measuring Products
and Solutions for Industry Customers

HEADQUARTER

RIGOL TECHNOLOGIES CO., LTD.
No.8 Keling Road, New District,
Suzhou, JiangSu, P.R.China
Tel: +86-400620002
Email: info-cn@rigol.com

JAPAN

RIGOL JAPAN CO., LTD.
5F, 3-45-6, Minamiotsuka, Toshima-Ku,
Tokyo, 170-0005, Japan
Tel: +81-3-6262-8932
Fax: +81-3-6262-8933
Email: info.jp@rigol.com

EUROPE

RIGOL TECHNOLOGIES EU GmbH
Friedrichshafener Str. 5
82205 Gilching
Germany
Tel: +49(0)8105-27292-21
Email: info-europe@rigol.com

KOREA

RIGOL KOREA CO., LTD.
5F, 222, Gonghang-daero,
Gangseo-gu, Seoul, Republic of Korea
Tel: +82-2-6953-4466
Fax: +82-2-6953-4422
Email: info.kr@rigol.com

NORTH AMERICA

RIGOL TECHNOLOGIES, USA INC.
10220 SW Nimbus Ave.
Suite K-7
Portland, OR 97223
Tel: +1-877-4-RIGOL-1
Email: sales@rigol.com

For Assistance in Other Countries

Email: info.int@rigol.com